


EH 15-20

(Configuration up to 3 kW)

PUMP SECTION AND LIST AND MAIN COMPONENTS

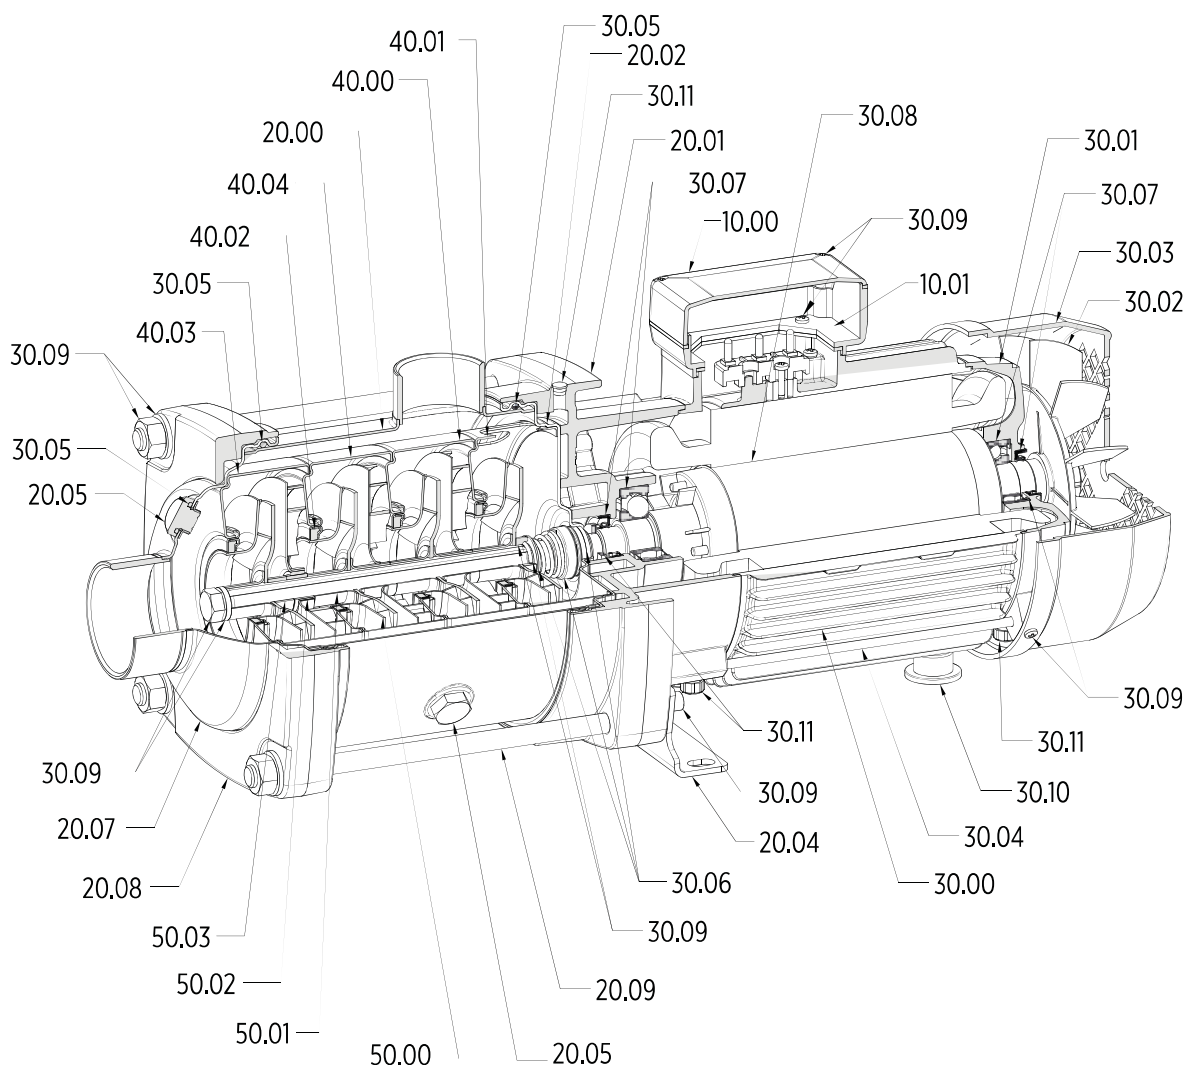

00150008 05/2017

Ref. N.	Description
10.03	Tie bolts
10.04	Kit nuts and washers
10.08	Pre-load flange
20.00	Outer case
20.01	Mechanical seal housing
20.03	Motor bracket
20.05	Filling plug
20.06	Kit bearings
20.12	Support foot and screws
20.13	Inlet cover
30.00	Pump shaft
30.01	Kit mechanical seal
30.02	Mechanical seal fastening kit
30.03	Kit O-rings
40.00	Stage housing and diffuser
40.02	Floating neck ring
40.03	Initial stage housing

Ref. N.	Description
40.04	Last Stage with diffuser
40.06	Stage housing and diffuser with bearing
50.00	Impeller
50.01	Impeller spacer
50.02	Intermediary sleeve
50.03	Intermediary sleeve spacer
60.00	Motor housing and stator
60.01	Bearing housing
60.02	Fan
60.03	Fan cover and screws
60.04	Motor tie rods
60.05	Kit motor spare components
60.06	Motor housing foot
60.07	Terminal box cover and base
60.08	Terminal board
60.09	Capacitor