




EH 3-5-9

PUMP SECTION AND LIST AND MAIN COMPONENTS

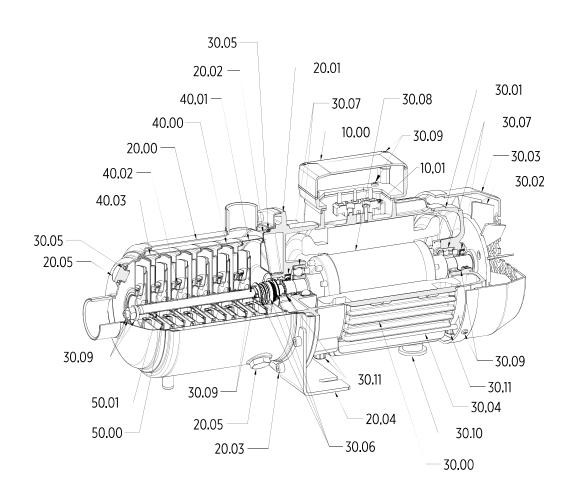

201	
20	
2	
Έ	
Έ	

Ref. N.	Description
20.00	Outer case
20.01	Mechanical seal housing
20.03	Motor bracket
20.05	Filling plug
20.06	Kit bearings
20.12	Support foot and screws
30.00	Pump shaft
30.01	Kit mechanical seal
30.02	Mechanical seal fastening kit
30.03	Kit O-rings
40.00	Stage housing and diffuser
40.02	Floating neck ring
40.03	Initial stage housing
40.04	Last Stage with diffuser
50.00	Impeller

Ref. N.	Description
50.01	Impeller spacer
60.00	Motor housing and stator
60.01	Bearing housing
60.02	Fan
60.03	Fan cover and screws
60.04	Motor tie rods
60.05	Kit motor spare components
60.06	Motor housing foot
60.07	Terminal box cover and base
60.08	Terminal board
60.09	Capacitor
60.10	Inverter
60.11	Pressure sensor
60.12	Kit cables

